

MFJ

Digital SWR/Wattmeter

Model MFJ-828



INSTRUCTION MANUAL

CAUTION: Read All Instructions Before Operating Equipment

MFJ ENTERPRISES, INC.

300 Industrial Park Road
Starkville, MS 39759 USA
Tel: 662-323-5869 Fax: 662-323-6551

DISCLAIMER

Information in this manual is designed for **user purposes only** and is *not* intended to supersede information contained in customer regulations, technical manuals/documents, positional handbooks, or other official publications. The copy of this manual provided to the customer will *not* be updated to reflect current data.

Customers using this manual should report errors or omissions, recommendations for improvements, or other comments to MFJ Enterprises, 300 Industrial Park Road, Starkville, MS 39759. Phone: (662) 323-5869; FAX: (662) 323-6551. Business hours: M-F 8-4:30 CST.

Contents

THE BASICS

Introduction.....	1
Features.....	1
Specifications.....	2
Amplifier Protection	2
Front Panel.....	3
SWR/Wattmeter.....	3
Wattmeter Zero Scale Adjustment.....	3
LCD Display.....	3
LCD Contrast Control.....	3
MODE Button.....	3
PEAK Button.....	3
ALRM LED.....	4
ALARM Button.....	4
POWER Button.....	4
Back Panel.....	4
Amp Enable In.....	4
Amp Enable Out.....	4
Power.....	4
RS-232.....	4
RLY.....	5
Ground.....	5
Antenna.....	5
Transmitter.....	5
Installation.....	5
SWR/Wattmeter.....	5

THE MENUS

Main Mode Menus.....	6
Digital Wattmeter Menu.....	6
Power Bar Meter Menu.....	6
SWR Bar Meter Menu.....	7
SWR/Power Bar Meters Menu.....	7
Setup Mode Menus.....	8
Meter Range Menu.....	9
Alarm SWR Menu.....	9
Beep Menu.....	9

APPENDICES

Factory Defaults.....	9
Self Test.....	10
SWR Bridge Calibration.....	11
Frequency Counter Calibration.....	12
Wattmeter Calibration.....	12
In Case of Difficulty.....	13
Technical Assistance.....	13

FIGURES

Figure 1. MFJ-828 Front Panel.....	3
Figure 2. MFJ-828 Back Panel.....	4
Figure 3. SWR/Wattmeter.....	5
Figure 4. Power Bar Meter (High Range).....	7
Figure 5. Power Bar Meter (Mid Range).....	7
Figure 6. Power Bar Meter (Low Range).....	7
Figure 7. SWR Bar Meter.....	7
Figure 8. Main Mode Menus Display.....	8

TABLES

Table 1. Failure Messages.....	10
--------------------------------	----

The Basics

Introduction

The MFJ-828 Digital SWR/Wattmeter measures up to 1500 watts. It has three high-resolution ranges with accuracy in each range from 1.8 to 54 MHz. True peak or average forward and reflected watts, SWR and frequency can be simultaneously displayed.

There are also auto-ranging bar meter modes to display forward and reflected power, SWR and power twin bar meters, or SWR only bar meter; SWR and forward power are also displayed numerically. *PeakHold*[™] feature freezes the highest forward power displayed bar segment for one, two or three seconds. These digital-analog displays make it visually easy to tune antenna tuners, amplifiers and transmitters.

There are three high-resolution forward/reflected power ranges that are automatically selected: a QRP range (25 watts full scale), a mid-range (250 watts full scale) and a high-range (1500 watts full scale). *TrueActive*[™] peak reading circuit gives *true* peak or average power on all modes.

Built-in frequency counter gives any transmitter digital frequency readout in continuous carrier mode. Perfect for older and QRP rigs such as MFJ-9420 travel radios and MFJ-9340 *QRPCubs*[™].

The MFJ-828 includes MFJ's *Amplifier Bypass Control*[™]. This exclusive MFJ feature protects your amplifier by taking your amplifier off-line should the SWR increase above a user-defined pre-set limit. There is also a relay connector with normally open and normally closed connections that toggle when the SWR is above the same pre-set limit.

All information is displayed on a 2-line 16-character high-contrast backlit LCD display. The MFJ-828 also includes a big lighted cross-needle SWR/wattmeter.

The MFJ-828 enters a "sleep" mode when idle and when no transmit signal is present, turning off the microprocessor clock to avoid the generation of spurious signals.

Features

- Power range of 25, 250 or 1500 watts
- 1.8 to 54 MHz continuous frequency coverage
- Adjustable alarm SWR from 1.5 to 3.0
- *Amplifier Bypass Control*[™] automatically protects your amplifier during high SWR events
- Lighted cross-needle SWR/wattmeter with fixed or auto ranging
- Multifunction backlit LCD display with contrast control
- Numeric readings for frequency, SWR, forward and reflected power
- Bar meters for SWR, forward and reflected power with auto-ranging
- Peak or average power mode
- Built-in frequency counter
- Built-in bootloader for field upgradeable firmware

Specifications

- RF power range : 25, 250 or 1500 watts
- Frequency range : 1.8 to 54 MHz continuous coverage
- Frequency counter accuracy : ± 1 kHz
- A/D conversion resolution : 10-bit
- Forward power display resolution : 0.1 for < 100 watts and 1 for ≥ 100 watts
- Reflected power display resolution : 0.1 for < 10 watts and 1 for ≥ 10 watts
- SWR display resolution : 0.01 for $< 10:1$ and 0.1 for $\geq 10:1$
- Power bar meters resolution : 60 segments
- SWR bar meter resolution : 56 segments
- Memory endurance : 1 million erase/write cycles typical
- Memory data retention : 100 years typical
- Power supply requirement : 12 - 15 volts DC
- Current consumption : 250 milliamps or less
- Dimensions (projections included) : $7 \frac{1}{2} \times 3 \frac{3}{4} \times 6 \frac{3}{4}$ in; $191 \times 95 \times 171$ mm (w \times h \times d)
- Display : 2-line \times 16-character backlight LCD
- TRANSMITTER connector : SO-239
- ANTENNA connector : SO-239
- POWER connector : 2.1×5.5 mm coaxial plug, center pin positive
- RS-232 connector : D-sub 9-pin
- RLY connector : 3.5 mm stereo phone
- AMP ENABLE connectors : Phono (RCA) $\times 2$

† Specifications and design are subject to change without notice or obligation.

Amplifier Protection

The MFJ-828 is unique in that it provides *Amplifier Bypass Control*[™] for hands-free protection of your amplifier during high SWR events. This capability is provided by passing the amplifier enable control line to your amplifier through the MFJ-828 **AMP ENABLE IN/OUT** connectors. A normally closed high-speed reed relay interrupts the amplifier enable signal when a user high-SWR pre-set is exceeded. A normally closed relay is used so that your amplifier system works properly when the MFJ-828 is turned off.

Note: MFJ recommends that the amplifier enable control signal be **always** connected through the **AMP ENABLE IN/OUT** connectors on the MFJ-828.

Front Panel

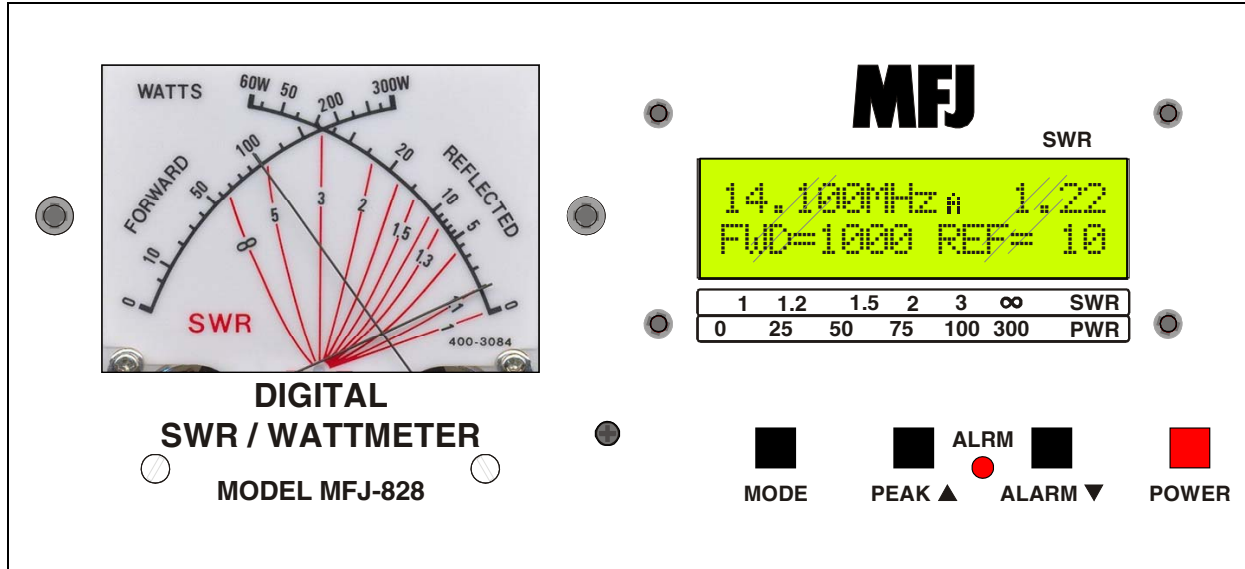


Figure 1. MFJ-828 Front Panel.

- SWR/Wattmeter:** The cross-needle meter measures forward power, reflected power, and SWR. It operates whenever the unit is powered on. Full-scale readings are 300 watts forward and 60 watts reflected. The meter can be set to high power range of 3000 watts forward and 600 watts reflected, or low power range of 30 watts forward and 6 watts reflected. The SWR is measured at the point where the two needles cross. See “SWR/Wattmeter” section for more detailed information.
- Wattmeter Zero Scale Adjustment:** Two trimpots located below the wattmeter calibrate the zero scales of the forward and reflected needles. The small hole on the right adjusts the forward needle and the small hole on the left adjusts the reflected needle. There are also two internal trimpots inside the unit for full-scale adjustment. See “Wattmeter Calibration” section for the calibration procedure.
- LCD Display:** A 2-line by 16-character alphanumeric display with backlight. It displays the unit’s various menus and status. The display contrast can be adjusted by the LCD contrast control on the front panel. Below the display are the SWR and power bar meter scales. Refer to Figure 7 for descriptions of the various displayed information.
- LCD Contrast Control:** A trimpot control that adjusts the contrast of the LCD display. Use a small flat blade screwdriver, insert into the small hole to the left of the display, and turn clockwise to increase contrast.
- MODE Button:** Time-sensitive and used to navigate through the various main menus and to enter or exit the setup menus.
- PEAK Button:** Used to select peak or average power mode; one beep indicates peak hold time of one second, two beeps for two seconds, three beeps for three seconds, and four beeps for average mode. Peak envelope power (PEP) is measured by selecting a peak mode with selectable peak hold time. A small “1”, “2” or “3” appears on the display to indicate peak mode is on and the number represents the peak hold time in second. A small “A” appears to indicate average mode.

- **ALRM LED:** Illuminates when the SWR is greater than the selectable alarm SWR.
- **ALARM Button:** Used to toggle the alarm feature on and off; one beep indicates on and two beeps indicate off. When enabled, the ALRM LED will light and the buzzer will sound when the SWR is greater than the selectable alarm SWR. Also, the amplifier connected to the Amp Enable connection will bypass and the RLY switch position will toggle when the SWR is above the alarm SWR.
- **POWER Button:** Used to turn the unit on and off. Press to turn power on; press again to turn power off.

WARNING: Do not turn the power on and off rapidly, otherwise the unit's setting memory can be corrupted and the unit will have to be reset to factory defaults.

Back Panel

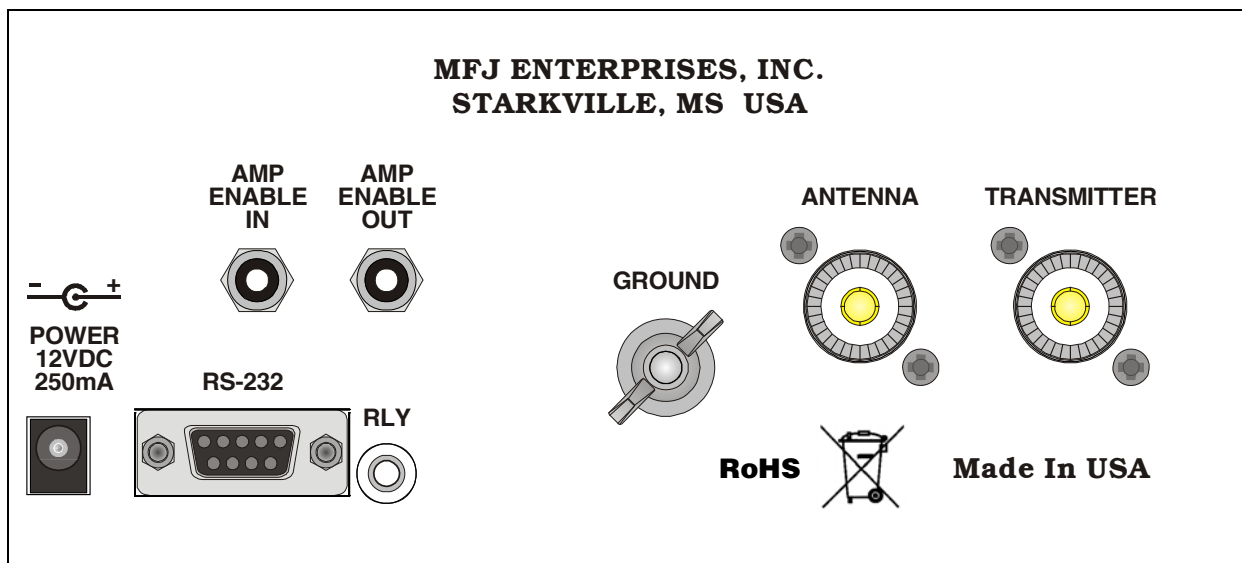


Figure 2. MFJ-828 Back Panel.

- **Amp Enable In:** RCA phono connector for connecting to the radio's amplifier control output.
- **Amp Enable Out:** RCA phono connector for connecting to the amplifier's relay control input.
- **Power:** This jack accepts a standard 2.1×5.5 mm coaxial plug with positive center and negative sleeve. The unit requires 12 volts DC at up to 250 milliamps. The use of a regulated supply is not mandatory but is recommended for best performance. An optional 12 volts DC 500 milliamp power supply, the MFJ-1312D, is available from MFJ Enterprises, Inc.

WARNING: Do not apply voltages greater than 18 volts to this unit, or permanent damage to the unit may result.

- **RS-232:** DB-9 female connector for connecting to the computer's RS-232 serial port to update firmware. Check <http://www.mfjenterprises.com/support.php> for the latest version of the firmware.

- **RLY:** 3.5 mm stereo phone jack connected to a high-speed reed relay switch with the tip normally closed (NC), the ring normally open (NO), and the sleeve as common (COM). The relay switch toggles position when the SWR is above the alarm SWR.

Connection	Relay Switch
Tip	NC
Ring	NO
Sleeve	COM

- **Ground:** Wing-nut terminal for RF ground wire connection.
- **Antenna:** SO-239 connector for coax cable from antenna or dummy load.
- **Transmitter:** SO-239 connector for coax cable from transmitter or transceiver.

Installation

1. Place the wattmeter in a convenient location at the operating position.
2. Install the wattmeter between the transmitter and the desired antenna. Use good quality coaxial cable (such as RG-8/U) to connect the transmitter (or amplifier) to the rear panel connector marked TRANSMITTER.
3. Connect the antenna to the rear panel connector marked ANTENNA.
4. A GROUND post is provided for an RF ground connection.
5. Connect a 12 to 15 VDC power source capable of 250 milliamps to the rear panel jack marked POWER.

SWR/Wattmeter

The backlit cross-needle meter measures forward power, reflected power, and SWR, and operates whenever the unit is powered on. Forward power up to 300 watts is displayed on the left-hand FORWARD meter scale. Reflected power up to 60 watts is read on the right-hand REFLECTED meter scale. For high-power usage, meter ranges of 3000 watts forward and 600 watts reflected are available; multiply the readings on these scales by ten when in the high power meter range. For low-power, meter ranges of 30 watts forward and 6 watts reflected are available; divide the readings on these scales by ten for low-power meter range.

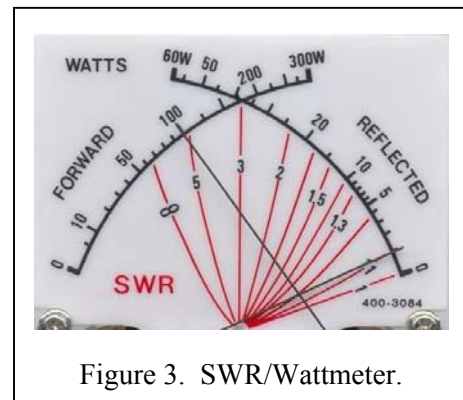


Figure 3. SWR/Wattmeter.

The meter default condition is auto ranging, which automatically sets the meter scales according to the input RF power to the wattmeter. Forward power greater than 25 watts automatically sets the meter to the mid power range; forward power greater than 250 watts automatically sets the meter to the high power range. Forward power less than 200 watts automatically set the meter to the mid power range; forward power less than 20 watts automatically set the meter to the low power range.

The SWR is read from the 11 red SWR curves that range from 1.0 to infinity. The SWR is measured by observing the point where the forward and reflected power needles cross on the red curved scales across the center of the meter. No cumbersome or time-consuming SWR sensitivity adjustments are required with this meter. Figure 3 shows an SWR of approximately 1.2.

$$SWR = \frac{1 + \sqrt{\frac{\text{reflected power}}{\text{forward power}}}}{1 - \sqrt{\frac{\text{reflected power}}{\text{forward power}}}}$$

The MFJ-828 also includes an SWR bar meter. It also has bar meters for forward and reflected power.

The Menus

Main Mode Menus

The main mode menus show various wattmeter settings and status. There are four main mode menus arranged in a “wrap-around” structure. When powered on, wattmeter operation starts with the main menu that was last used. Within each main menu, press the [MODE] button briefly to view the next main menu. Press and hold the [MODE] button for two seconds to enter the setup mode (see below). Refer to Figure 7 for details on the displayed information.

***Note:** In sideband mode, the frequency readout on the wattmeter display jumps around to different frequencies while transmitting and stops on another frequency when un-keyed. This is normal and is a characteristic of sideband mode, because sideband signals jump around in frequency and power.*

Digital Wattmeter Menu

Shows the frequency, SWR, and forward and reflected power in watts.

Power Bar Meter Menu

Shows the frequency, SWR, forward power, and bar meters for forward and reflected power. The top bar meter is the forward power and the bottom bar meter is the reflected power. The numeric reading of forward power appears at the end of the bar meters. A power scale is printed just below the display on the front panel. Each power bar meter consists of 60 bar segments. When in the high power range, multiply the readings on the printed power scale by ten, and each vertical bar segment consists of four dots. Below 1000 watts, each bar segment represents 20 watts; above 1000 watts, each bar segment represents 200 watts. The forward bar meter has a “peak hold” feature. The peak meter hold function freezes the highest displayed bar segment of the forward power for approximately one, two or three seconds, so that you can more easily read the meter. This function can be turned ON and OFF with the PEAK button.

When in the mid power range (250 watts scale), each vertical bar segment consists of three dots. Below 100 watts, each bar segment represents two watts; above 100 watts, each bar segment represents 20 watts.

For low-power, meter range of 25 watts is available. When in the low power range, divide the readings on the printed power scale by ten, and each vertical bar segment consists of two dots. Below 10 watts, each bar segment represents 0.2 watts; above 10 watts, each bar segment represents two watts.

The power meter default condition is auto ranging. Auto range automatically sets the meter scale according to the input RF power to the wattmeter. Forward power greater than 25 watts automatically sets the meter to the mid power range; forward power greater than 250 watts automatically sets the meter

to the high power range. Forward power less than 200 watts automatically set the meter to the mid power range; forward power less than 20 watts automatically set the meter to the low power range.



Figure 4. Power Bar Meter (High Range).

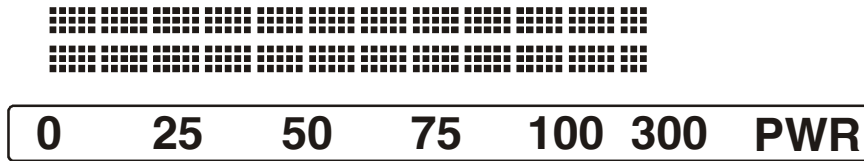


Figure 5. Power Bar Meter (Mid Range).

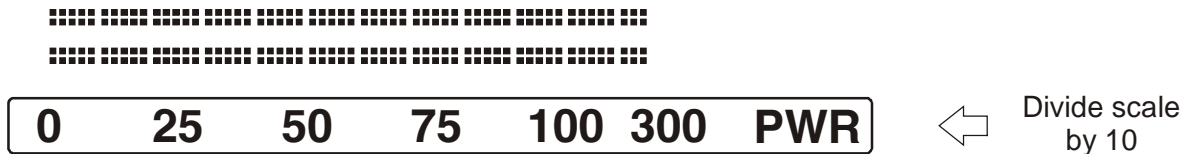


Figure 6. Power Bar Meter (Low Range).

SWR Bar Meter Menu

Shows the frequency, SWR, forward power, and SWR bar meter. A SWR scale is printed just below the display on the front panel. The 12-block (56-segment) SWR bar meter indicates SWR of 1.00, 1.01-1.10, 1.11-1.20, 1.21-1.30, 1.31-1.40, 1.41-1.50, 1.51-1.70, 1.71-2.00, 2.01-2.50, 2.51-3.00, 3.01-5.00, 5.01-10.0 and infinity. The numeric reading of forward power appears at the end of the bar meter.

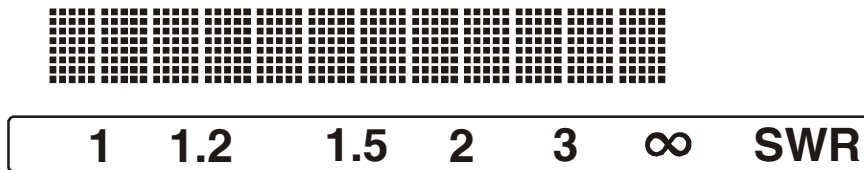


Figure 7. SWR Bar Meter.

SWR/Power Bar Meters Menu

Shows the SWR bar meter on the top line and the power bar meters on the bottom line of the display. The numeric readings of SWR and forward power appear at the end of the bar meters.

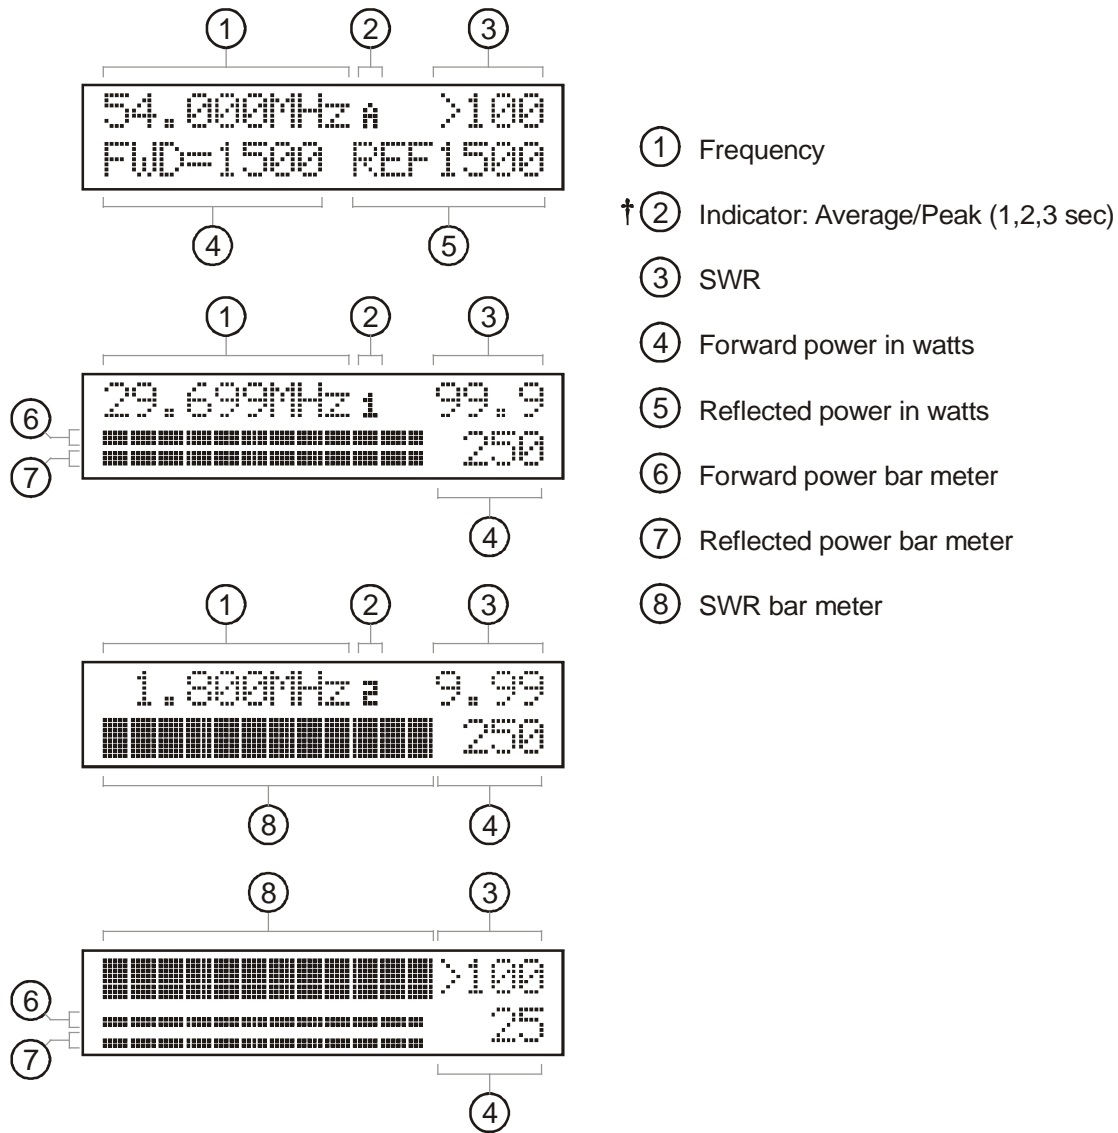


Figure 8. Main Mode Menu Display.

Setup Mode Menus

The setup mode menus allow you to configure the MFJ-828 for the way you want it to behave. There are three setup mode menus arranged in a “wrap-around” structure. To access these setup menus, press and hold the [MODE] button for two seconds. The setup menu that will display is the one that was last used. When finished, press the [MODE] button for two seconds to go back to the main mode for normal operation. If no button is pressed for more than eight seconds, the unit automatically exits the setup mode and returns to the main mode.

Within each setup menu:

- Press the [MODE] button briefly to cycle through the setup menus. Press and hold the [MODE] button for two seconds to exit the setup mode and go back to the main mode.
- Press the [PEAK] button to increase or turn on the setting for the current setup menu.

- Press the [ALARM] button to decrease or turn off the setting for the current setup menu.

Meter Range Menu

Allows you to select the meter scale range. Low range has full scale of 25 watts, mid range has full scale of 250 watts, and high range has scale of 1500 watts. Auto range automatically sets the meter scales according to the input RF power to the wattmeter. Forward power greater than 25 watts automatically sets the meter to the mid power range; forward power greater than 250 watts automatically sets the meter to the high power range. Forward power less than 200 watts automatically set the meter to the mid power range; forward power less than 20 watts automatically set the meter to the low power range. Default is AUTO Range.

Alarm SWR Menu

Allows you to set the alarm SWR from 1.5 to 3.0. The ALRM LED will light and the buzzer will sound when the SWR is above the alarm SWR. Also, the amplifier connected to the Amp Enable connection will bypass and the RLY switch position will toggle when the SWR is above the alarm SWR. Default is 3.0.

Beep Menu

Acknowledgement beep sounds each time a parameter is changed to acknowledge it. This also controls the CW notification of “QRP”. If more than 1500 watts is applied to the unit, the unit will flash DECREASE POWER three times and send “QRP” (dah-dah-di-dah di-dah-dit di-dah-dah-dit) on CW. This function can be turned OFF for silent operation. Default is ON.

Appendices

Factory Defaults

Each time the wattmeter is powered off, the microprocessor saves all memories and configurations to non-volatile memory ready to be used the next time the unit is turned on. If the unit is not working properly, even on initial power on, try resetting to the factory defaults.

The unit is shipped with the following default settings:

- | | |
|---------------|-------------------|
| • Main Menu | Digital Wattmeter |
| • Setup Menu | Meter Range |
| • Meter Range | Auto |
| • Alarm SWR | 3.0 |
| • Beep | On |
| • Peak Hold | Off (Average) |
| • Alarm | On |

To reset the unit to these defaults:

1. Turn off the power to the unit.
2. Press and hold *only* the [PEAK] button while turning the power on.
3. Release the buttons when DEFAULTS RESET appears on the display.
4. Resume with normal operation.

WARNING: If the MFJ-828 is not behaving properly or acting erratic, try resetting the unit to factory defaults.

Self Test

A self-test routine will check the functions of the MFJ-828. This routine checks the display, the front-panel buttons, the internal memory, the audio circuitry, and the power-down circuitry. During the self-test, you may stop the test by turning off the unit; however, this should NOT be done during the memory test or the memory could be corrupted. The self-test can be completed in approximately 30 seconds.

Note: Performing the self-test will reset the unit to its factory default settings.

Here is the self-test procedure:

1. Turn off the power to the unit.
2. Press and hold *only* the [MODE] button while turning the power on.
3. The test begins by displaying a copyright message and firmware version numbers, such as COPYRIGHT (c) 2008-2011 MFJ ENTERPRISES, INC. VERSION YYWW.BB. At the same time, the forward needle of the meter moves slowly up to full scale and then drops to zero, followed by the reflected needle moving slowly up to full scale and then dropping to zero. These test the display and the analog meter. Release the [MODE] button before the message completes.
4. You will be prompted to press each of the front-panel buttons: [MODE], [PEAK] and [ALARM].
5. The unit then tests its non-volatile memory. Notice this step will reset the unit to its factory default settings.
6. If the unit is okay, the ALRM LED will turn on steady, a repetitive message PASS will be displayed and sent as Morse code (di-dah-dah-dit di-dah di-di-dit di-di-dit). If there is a problem, the ALRM LED will blink continuously, a failure message will be displayed and sent repetitively.
7. Once you have confirmed that the audio is okay, turn the unit off.
8. Turn the unit on again to test the power-down detection circuitry.
9. If the power-down detection circuitry is okay, the ALRM LED will turn on steady, a repetitive message PASS will be displayed and sent as Morse code (di-dah-dah-dit di-dah di-di-dit di-di-dit). If there is a problem, the ALRM LED will blink continuously, message PD FAIL will be displayed and sent as Morse code repetitively.
10. Turn the power off.

Failure Message	Indicates
ALARM FAIL	[ALARM] button is shorted or improperly connected.
MEMORY FAIL	Non-volatile memory circuitry is improperly connected.
MODE FAIL	[MODE] button is shorted or improperly connected.
PD FAIL	Power-down circuitry problem.
PEAK FAIL	[PEAK] button is shorted or improperly connected.
WAKEUP FAIL	Microprocessor wakeup circuitry problem.

Table 1. Failure Messages.

SWR Bridge Calibration

To calibrate the SWR Bridge, you will need a transmitter capable of 100 watts output, a precise calibrated wattmeter, a 50-ohm dummy load, three 50-ohm SO-239 coax cables, a Phillips screwdriver, and a tuning tool or small flat blade screwdriver.

WARNING: Do not touch anything inside the wattmeter during operation! Serious, painful RF burns can result.

WARNING: Never operate the MFJ-828 with its cover removed; dangerous voltages and currents can be present during operation. Never exceed wattmeter specifications.

1. Turn off the power to the unit and the transmitter.
2. Remove the cover from the unit (4 screws) with a Phillips screwdriver.
3. Connect the 50-ohm dummy load to the ANTENNA connector; connect the calibrated wattmeter between the transmitter and the TRANSMITTER connector on the unit.
4. Turn on the power to the transmitter. Using a frequency in the middle of the HF band, such as 7.253 MHz, for calibration is recommended.
5. Press and hold *both* the [MODE] and [PEAK] buttons while turning the power on.
6. The top line will display F: 0.0 0.0 0.0 to show the forward power and the bottom line will display R: 0.0 0.0 0.0 to show the reflected power. Key the transmitter to output 100 watts and adjust trimmer capacitor VC1 (located in front of the coax connectors) for minimum reflected power.
7. Key the transmitter to 100 watts output and adjust the FWD trimpot VR1 until the left F number shows forward power of 100 watts.
8. Key the transmitter to 100 watts output and adjust the trimpot VR3 until the center F number shows forward power of 100 watts.
9. Key the transmitter to 20 watts output and adjust the trimpot VR5 until the right F number shows forward power of 20 watts.
10. Turn off the transmitter and reverse the ANTENNA and TRANSMITTER connections; that is, connect the 50-ohm dummy load to the TRANSMITTER connector and connect the transmitter/wattmeter to the ANTENNA connector.
11. Turn on the transmitter's power.
12. Key the transmitter to 100 watts output and adjust the REF trimpot VR2 until the left R number shows reflected power of 100 watts.
13. Key the transmitter to 100 watts output and adjust the trimpot VR4 until the center R number shows reflected power of 100 watts.
14. Key the transmitter to 20 watts output and adjust the trimpot VR6 until the right R number shows reflected power of 20 watts.
15. Turn off the power to the unit and the transmitter.
16. Remove the transmitter/wattmeter and the 50-ohm dummy load from the unit.
17. Secure the cover back onto the unit.
18. Connect your transmitter to the TRANSMITTER connector and connect your antenna to the ANTENNA connector on the unit.

Frequency Counter Calibration

To calibrate the frequency counter, you will need a transmitter, a 50-ohm dummy load, two 50-ohm SO-239 coax cables, a Phillips screwdriver, and a tuning tool or small flat blade screwdriver.

WARNING: Do not touch anything inside the wattmeter during operation! Serious, painful RF burns can result.

WARNING: Never operate the MFJ-828 with its cover removed; dangerous voltages and currents can be present during operation. Never exceed wattmeter specifications.

1. Turn off the power to the unit and the transmitter.
2. Remove the cover from the unit (4 screws) with a Phillips screwdriver.
3. Connect the 50-ohm dummy load to the ANTENNA connector and connect the transmitter to the TRANSMITTER connector on the unit.
4. Turn on the power to the transmitter. Set and lock the frequency to *exactly* 29.000 MHz.
5. Press and hold *both* the [MODE] and [ALARM] buttons while turning the power on. A message CAL FREQ 29.000 will display.
6. Key the transmitter to output about 10 watts. Adjust trimmer capacitor VC2 (located next to the big integrated circuit) until the unit displays a frequency of 29.000MHz. Nominal tolerance of the frequency counter is ± 1 kHz.
7. Turn off the power to the unit and the transmitter.
8. Secure the cover back onto the unit.

Wattmeter Calibration

To calibrate the meter needles, you will need a Phillips screwdriver and a tuning tool or small flat blade screwdriver.

1. Turn off the power to the unit and the transmitter.
2. Remove the cover from the unit (4 screws) with a Phillips screwdriver.
3. Press and hold *both* the [PEAK] and [ALARM] buttons while turning the power on.
4. A message CAL WATTMETER TO ZERO SCALE will display. Use a small flat blade screwdriver and adjust the two trimpots, located below the analog meter, to set both the forward and reflected needles to the 0-watt marks.
5. Press the [MODE] button to calibrate the needles to full scales.
6. A message CAL WATTMETER TO FULL SCALE will display. Adjust the two trimpots VR7 and VR8, located on the left side of the ribbon cable, to set the forward and reflected needles to the 300-watt and 60-watt marks, respectively.
7. Press the [MODE] button to end calibration and resume normal operation.
8. Secure the cover back onto the unit.

In Case of Difficulty

If the LCD screen is blank, check adjustment of the contrast control.

If the wattmeter acts erratic, reset the wattmeter to factory defaults.

Technical Assistance

If you have any problem with this unit first check the appropriate section of this manual. If the manual does not reference your problem or your problem is not solved by reading the manual, you may call *MFJ Technical Service* at 662-323-0549 or the *MFJ Factory* at 662-323-5869. You will be best helped if you have your unit, manual and all information on your station handy so you can answer any questions the technicians may ask.

You can also send questions by mail to MFJ Enterprises, Inc., 300 Industrial Park Road, Starkville, MS 39759; by facsimile (FAX) to 662-323-6551; or by email to techinfo@mfjenterprises.com. Send a complete description of your problem, an explanation of exactly how you are using your unit, and a complete description of your station. Also include the firmware version number of your unit.

Note

LIMITED 12 MONTH WARRANTY

MFJ Enterprises, Inc. warrants to the original owner of this product, if manufactured by MFJ Enterprises, Inc. and purchased from an authorized dealer or directly from MFJ Enterprises, Inc. to be free from defects in material and workmanship for a period of 12 months from date of purchase provided the following terms of this warranty are satisfied.

1. The purchaser must retain the dated proof-of-purchase (bill of sale, canceled check, credit card or money order receipt, etc.) describing the product to establish the validity of the warranty claim and submit the original or machine reproduction of such proof of purchase to MFJ Enterprises, Inc. at the time of warranty service. MFJ Enterprises, Inc. shall have the discretion to deny warranty without dated proof-of-purchase. Any evidence of alteration, erasure, or forgery shall be cause to void any and all warranty terms immediately.
2. MFJ Enterprises, Inc. agrees to repair or replace at MFJ's option without charge to the original owner any defective product under warrantee provided the product is returned postage prepaid to MFJ Enterprises, Inc. with a personal check, cashiers check, or money order for **\$10.00** covering postage and handling.
3. This warranty is **NOT** void for owners who attempt to repair defective units. Technical consultation is available by calling the Service Department at 662-323-0549 or the MFJ Factory at 662-323-5869.
4. This warranty does not apply to kits sold by or manufactured by MFJ Enterprises, Inc.
5. Wired and tested PC board products are covered by this warranty provided **only the wired and tested PC board product is returned**. Wired and tested PC boards installed in the owner's cabinet or connected to switches, jacks, or cables, etc. sent to MFJ Enterprises, Inc. will be returned at the owner's expense unrepaired.
6. Under no circumstances is MFJ Enterprises, Inc. liable for consequential damages to person or property by the use of any MFJ products.
7. **Out-of-Warranty Service:** MFJ Enterprises, Inc. will repair any out-of-warranty product provided the unit is shipped prepaid. All repaired units will be shipped COD to the owner. Repair charges will be added to the COD fee unless other arrangements are made.
8. This warranty is given in lieu of any other warranty expressed or implied.
9. MFJ Enterprises, Inc. reserves the right to make changes or improvements in design or manufacture without incurring any obligation to install such changes upon any of the products previously manufactured.
10. All MFJ products to be serviced in-warranty or out-of-warranty should be addressed to:

MFJ Enterprises, Inc.
300 Industrial Park Road
Starkville, Mississippi 39759 USA

and must be accompanied by a letter describing the problem in detail along with a copy of your dated proof-of-purchase.

11. This warranty gives you specific rights, and you may also have other rights which vary from state to state.



MFJ ENTERPRISES, INC.
300 Industrial Park Road
Starkville, MS 39759

MFJ-828 Manual
Version 2B
Printed In U.S.A. 01/2010